

XL REFERENCE NUMBERS

XL 88	Crankcase	BA1
XL 98	Induction pipe	BE21
XL 125	Fan bearing pulley	BB25
XL 145	Crankshaft	BB1
XL 147	Piston	BC50/56
XL 150	Connecting rod cap (& bearing)	BC43
XL 176	Cover for untoothed flywheel (A1-1 to 2139)	BA62
XL 182	Gearbox front cover (bronze)	BH2
XL 253	Steering box (1 – 1st 100 cars)	BM24
XL 254	Steering box cover	BM49
XL 255	Steering lever bush	BM53
XL 256	Steering inner column	BM19
XL 257	Worm gear	BM31
XL 258	Bottom bush (worm)	BM22
XL 259	Steering worm wheel	BM32
XL 260	Top thrust washer (worm)	BM41/42
XL 261	Control bracket tube socket	BM47
XL 262	Control bracket (ign/gas)	BM6
XL 263	Steering outer column	BM17
XL 264	Steering outer column lower threaded portion	BM21
XL 265	Control bracket tube nut	BM48
XL 266	Ignition control lever	BM11
XL 267	Ignition control lever grub screw	BM13
XL 268	Ignition control lever friction block	BM12
XL 269	Steering wheel	BM2?
XL 270	Steering lever (drop arm)	BM63
XL 271	Carburettor control lever	BM10
XL 272	Control bracket tube	BM46
XL 273	Ignition control tube	BM16
XL 274	Throttle control tube	BM15
XL 291	Steering side tube ball pin	BM107
XL 292	Steering thrust block	BM105
XL 293	Steering side tube cap	BM101
XL 294	Steering thrust block (fixed)	BM106
XL 298	Steering side tube	BM99
XL 318	Throttle control lever	BF12
XL 319	Magneto control lever (short)	BM57
XL 337	Valve lifter thumbscrew	BT18
XL 387	Crankcase?	BA1
XL 320	Carburettor control lever (long)	BM59
XL 411	Cylinder end plug	BC14
XL 426	Cylinder foot studs	BA25
XL 462	Oil baffles	BA37
XL 502	Aluminium sump	BA71
XL 505	Cylinder block (696 cc)	BC1
XL 506	Cylinder head (696 cc)	BC4
XL 507	Side water inlet branch	BD47
XL 510	Oil pump base	BA104
XL 513	Dynamo housing	BG3
XL 514	Camshaft front bearing (1st design)	BA28
XL 516	Camshaft gear	BB21
XL 518	Camshaft (1st design)	BB18
XL 520	Magneto drive gear	BB27

XL 524	Sump plug	BA79 / BH30 / BO11
XL 528	Connecting rod (2)	BC43
XL 533	Swivel axle lever	BM96
XL 534	Steering arm (n/s)	BM92?
XL 535	Steering joints (o/s)	BM91?
XL 537	Track rod end (threaded)	BM82
XL 538	Track rod end (fixed)	BM83
XL 553	Gearbox top (early type)	BH5
XL 559	Gear lever change box	BH15
XL 565	Front axle (no shock absorber)	BL1
XL 566	Front back plates o/side	BL43
XL 567	Front back plates n/side	BL34
XL 576	Rear axle tube outer flange	BO3/4
XL 585	Accelerator pedal	BF1
XL 600	Ignition control lever	BM11
XL 624	Gearbox plug and filler plug	BA79
XL 633	Wheel nut	BS6
XL 659	Camshaft packing shims	BA36
XL 667	Crankcase	BA1
XL 675	Rear axle, offside	BO38
XL 676	Rear axle, nearside	BO39
XL 688	Handbrake bracket adjusting screw boss	BK21
XL 723	Magneto vernier coupling flange (magneto)	BA92
XL 742	Clutch withdrawal levers (one piece casting)	-----
XL 744	Magneto control lever	BF15/29
XL 753	Starting nut	BB36
XL 795	Starting handle, Brooklands, 4.5 centres	BD1
XL 824	Oil drain plug	BA79
XL 845	Cylinder head (747 cc) (1923 from Car No. 101)	BC1
XL 887	Crankcase	BA1
XL 888	Timing gear case	BA2
XL 889	Timing gear cover (1)	BA5
XL 892	Camshaft thrust button	BA35
XL 896	Steering box (2)	BM24
XL 900	Cylinder block (1924)	BC4
XL 914	Gearbox back plate	BH10
XL 917	Starting handle mounting	BD9
XL 919	Front hub cap (aluminium)	BL21
XL 920	Rear hub cap (aluminium)	BL46
XL 924	Gear lever	BH20
XL 930	Gearbox casing	BH1
XL 937	Starting handle housing	BD9
XL 950	Gearbox (1)	BH1
XL 960	Carburettor control lever	BF12
XL 963	Cylinder block	BC30
XL 972	Brake compensating lever o/s	BN14
XL 973	Brake compensating lever n/s	BN15
XL 974	Rear brake adjusting nut	BN9
XL 985	Inlet manifold	BE21
XL 986	Accelerator pedal (2)	BF1
XL 988	Hand control bracket	BM6
XL 989	Control bracket – steering	BM6
XL 994	Exhaust manifold	BE30
XL 1025	Fan blade	BD21

XL 1028	Fan spindle bracket (1923)	BD34
XL 1057	Pinion 9 teeth 7/8" dia	BP31
XL 1064/66	Hand-operated starter	
XL 1084	Brake pedal lever	BN1
XL 1089	Gearbox front cover	BH2
XL 1093	Clutch pedal (lever?)	BN35
XL 1094	Brake pedal	BN3
XL 1128	Fan spindle bracket	BD34
XL 1130	Fan spindle	BD28
XL 1133	Fan bearing (small pulley)	BD25
XL 1134	Dynamo casing	BG3
XL 1136	Front bracket adjusting screw boss	BK21
XL 1138	Rear spring	
XL 1139	Torque tube locating ball	BP43
XL 1150	Front axle (1)	BL1
XL 1158	Rear spring	
XL 1163	Cover for flywheel with teeth (2140 – 2201, 19/11/23)	
XL 1164	Gearbox top (later type)	BH5
XL 1168	Starter motor housing (CAV)	BG54
XL 1169	Starter drive housing	BG64
XL 1170	Starter motor gear	BG62
XL 1190	Front axle (2)	BL1
XL 1194	Camshaft front bearing (2nd design)	BA28
XL 1195	Camshaft (with shoulder – 2nd design)	BB18
XL 1197	Timing gear cover (2)	BA84
XL 1203	Steering box (41 deg. rake for Sports, etc)	
XL 1214	Stub axle (n/s)	BL43
XL 1215	Stub axle (o/s)	BL42
XL 1251	Fan bearing (large pulley)	BD25
XL 1253	Cylinder head (747 cc 2nd type)	BC28
XL 1354	Carburettor control lever	BM72
XL 1370	Front nearside sidescreen iron (the angled one)	----
XL 1387	Gearbox housing (2)	BH1
XL 1398	Brake shoe, 7"	BL54